


TIMBER ART DESIGN UK


TV 900037 ASSEMBLY INSTRUCTIONS

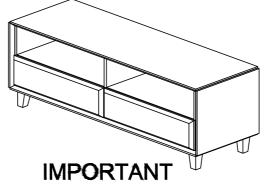


PLEASE READ BEFORE YOU CONTINUE FURTHER

WARNING AND INSTRUCTIONS


- PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURN'S WILL BE ACCEPTED.
- IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM INTENDED FOR USE.
- WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.
- UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.
- CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.
- ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.
- TOOLS NOT INCLUDED.
- CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.
- THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.
- KEEP SMALL PART OUT OF REACH OF CHILDREN.
- MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.
- DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.
- DO NOT TIGHTENED SCREWS UNTIL FULLY ASSEMBLED.
- DO NOT OVER TIGHTENED SCREWS OR BOLTS.
- DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGE OR WORN.
- DO NOT SIT AND STAND ON THE PRODUCT.
- TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.
- NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.

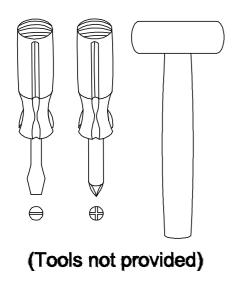

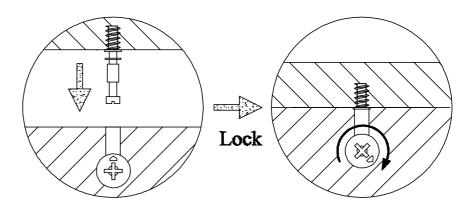

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


This is how a cam nut works......

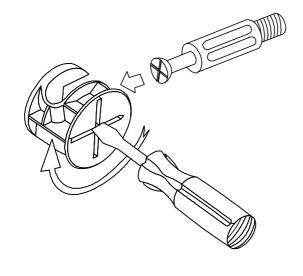

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

TWO PERSONS REQUIRED TO ASSEMBLE THIS PRODUCT

- 1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.
- 2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
- 3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

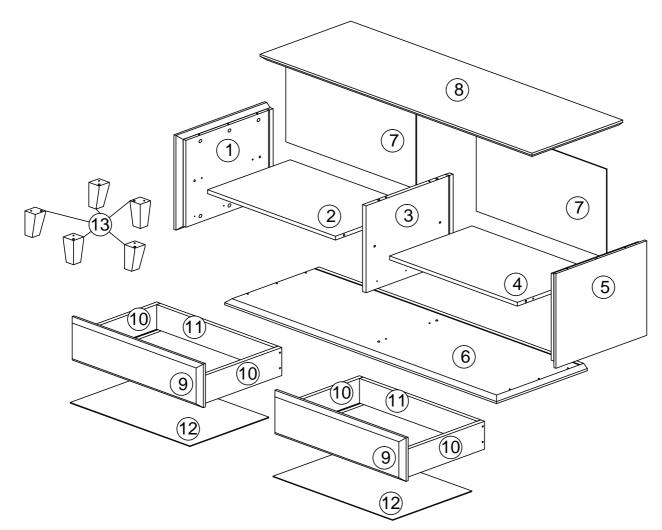


PARTS LIST

174210 2101						
NO.	PARTS			QTY		
1	392	Х	400	х	25	1 PCS
2	563	Х	364	х	15	1 PCS
3	360	Х	384	х	15	1 PCS
4	563	Х	364	х	15	1 PCS
5	392	Х	400	х	25	1 PCS
6	1198	Х	400	х	25	1 PCS
7	573	Х	370	х	2.5	2 PCS
8	1198	Х	400	х	25	1 PCS
9	180	Х	578	х	25	2 PCS
10	350	Х	116	х	15	4 PCS
11	519	Х	102	х	15	2 PCS
12	527	Х	348	х	2.5	2 PCS
13	100	х	45	х	45	5 PCS


HARDWARE LIST


NO.		DESCRIPTION	QTY
NO.		DESCRIPTION	QII
A 1		WOOD DOWEL M8 x 25MM	13
A2		WOOD DOWEL M8 x 40MM	2
В		CAM NUT	18
С		CAM BOLT	18
D	(6)	CAM CAP	18
E	√111111	CB SCREW M3.5 x 16MM	8
F	<u> </u>	CB SCREW M4 x 38MM	16
G	<	CSK CAP WOOD M6 x 60MM	7
н	←	NAIL 5/8	16
ı	0	PVC NAIL WITH PIN 5/8	5
J		ALLEY KEY M4	1
К		UNDERMOUNT RUNNER 14" (L)	2
L		UNDERMOUNT RUNNER 14" (R)	2



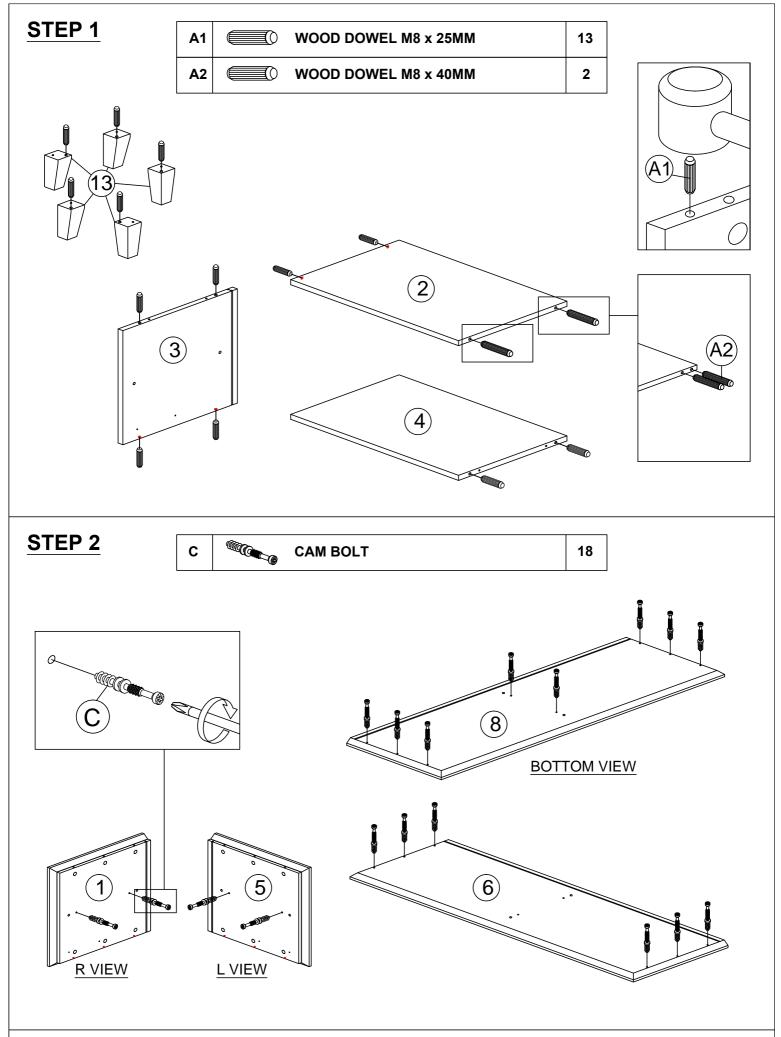




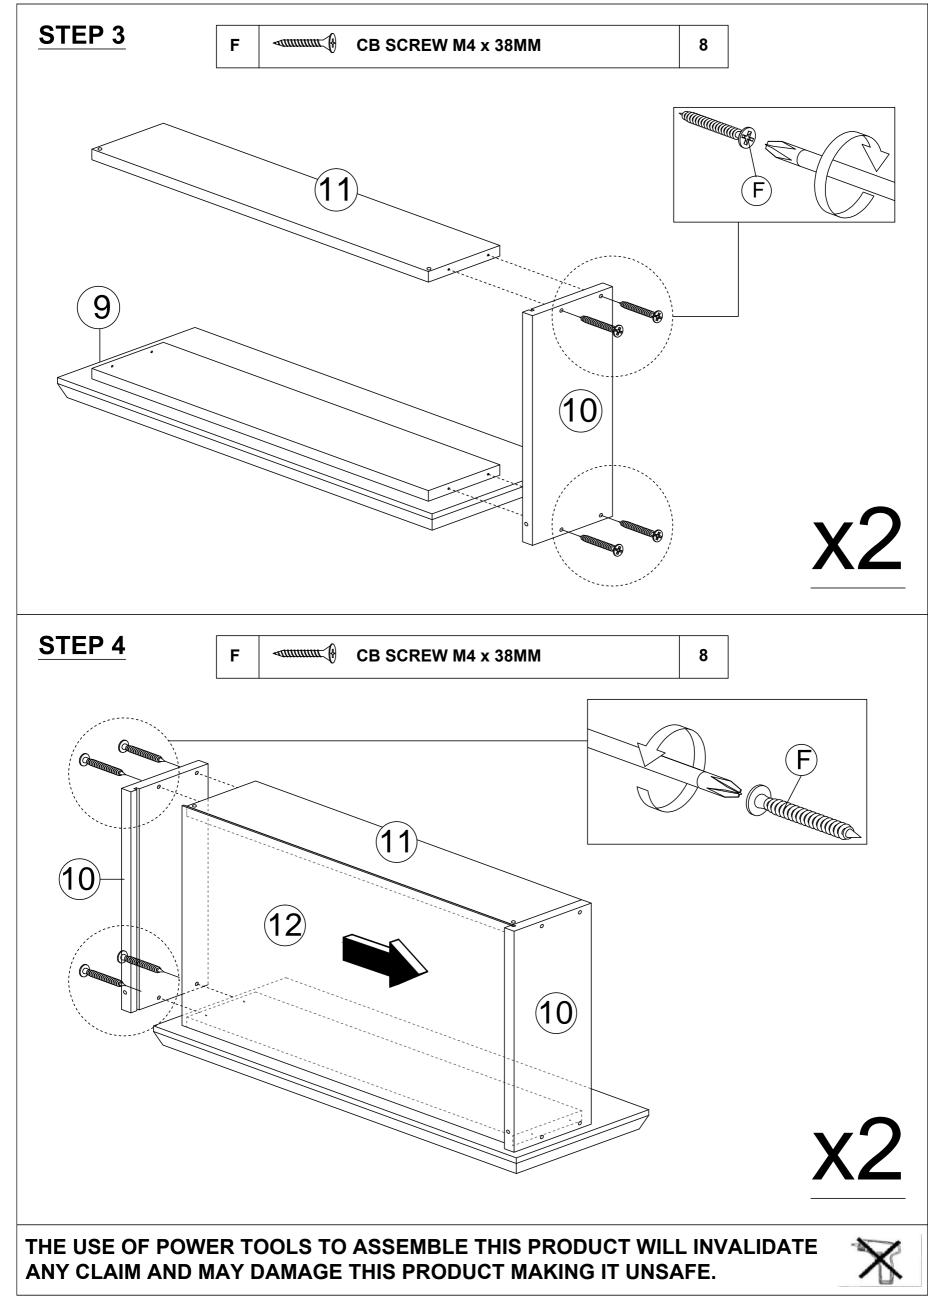

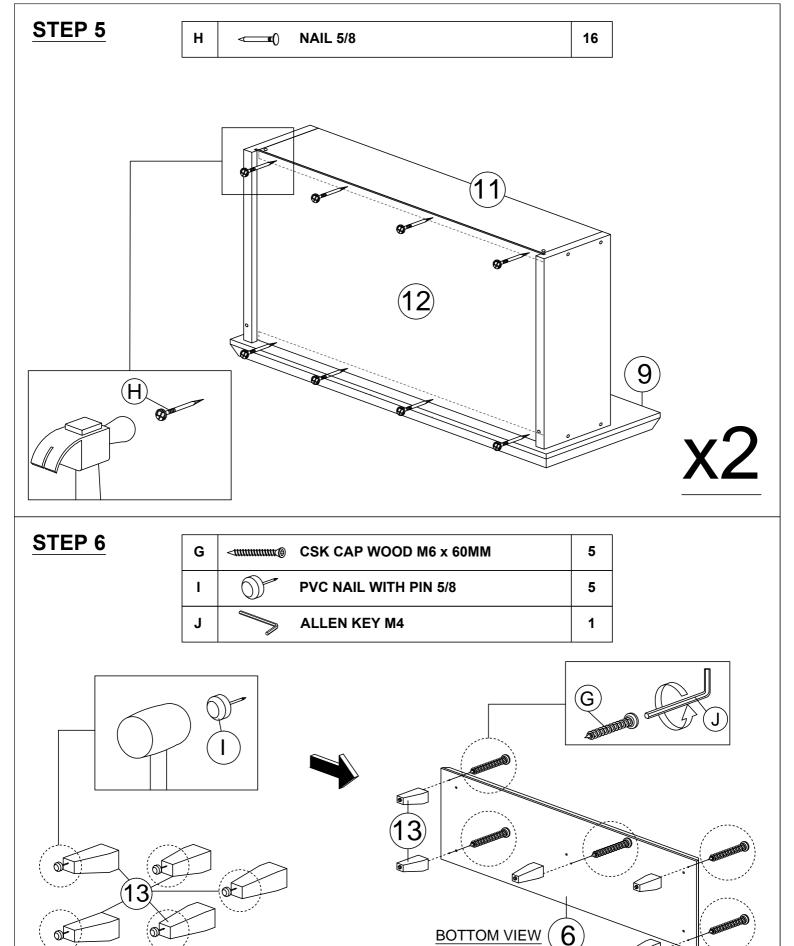





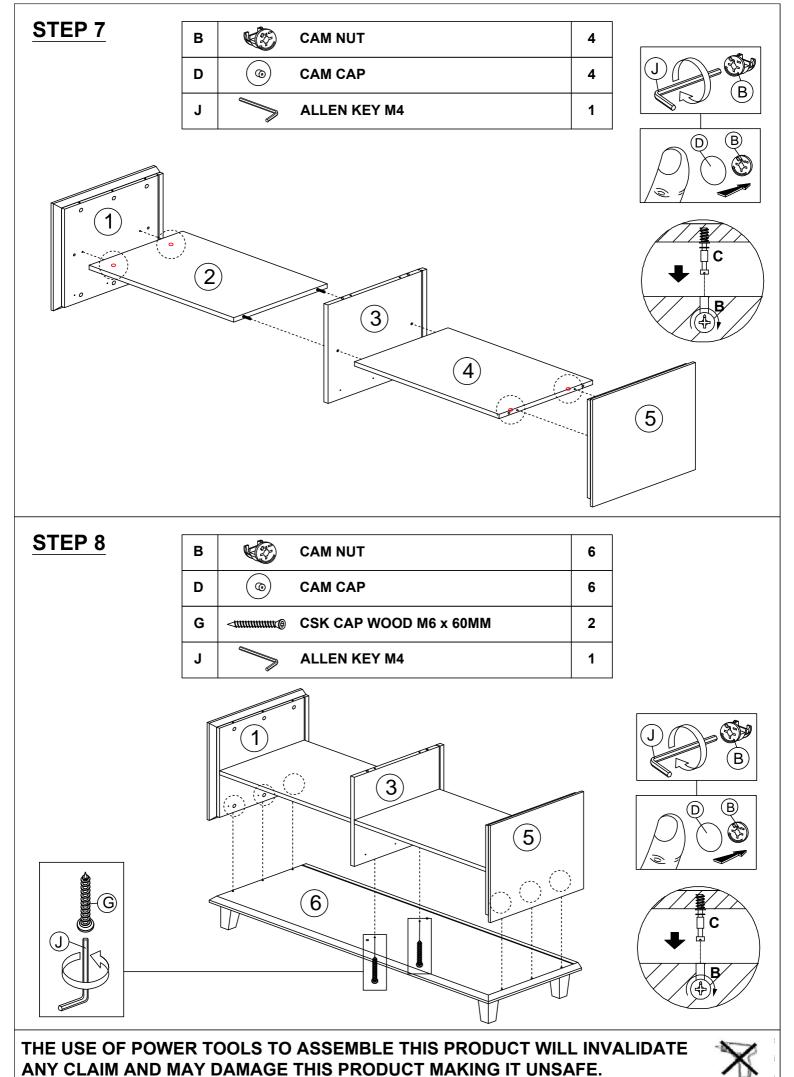

STEP 9


В		CAM NUT	8
D	(0)	CAM CAP	8
J		ALLEN KEY M4	1

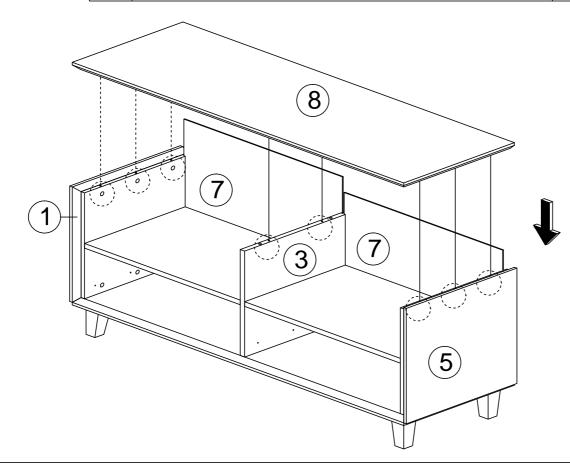

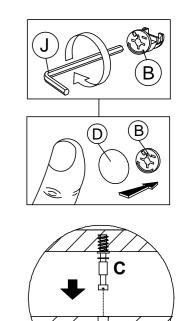

STEP 10

E	dimin (†)	CB SCREW M3.5 x 16MM	8
K		UNDERMOUNT RUNNER 14" (L)	2
L		UNDERMOUNT RUNNER 14" (R)	2

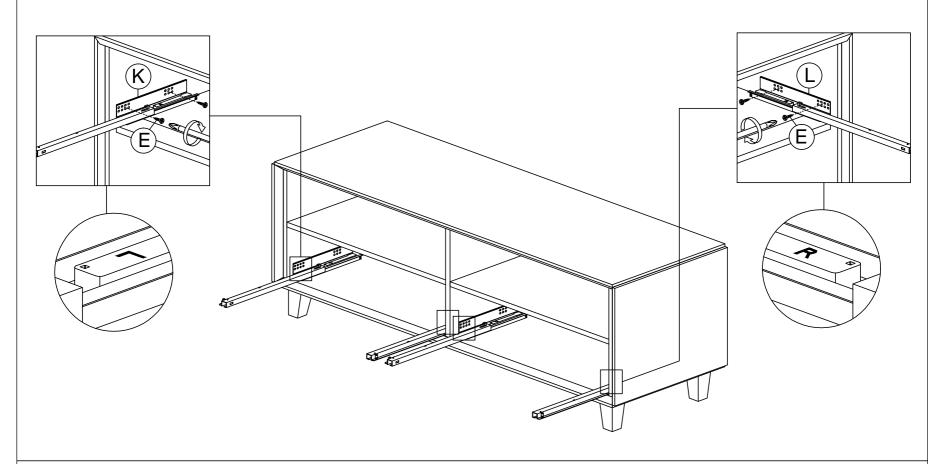



STEP 11 FIRST 11 9 (10) 9 9 SECOND **COMPLATE**

