


TIMBER ART DESIGN UK


TV 900049 ASSEMBLY INSTRUCTIONS

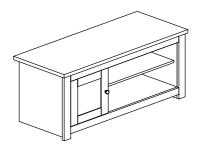


IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER

WARNING AND INSTRUCTIONS


- PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURN'S WILL BE ACCEPTED.
- IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM
 INTENDED FOR USE.
- WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.
- UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.
- CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.
- ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.
- TOOLS NOT INCLUDED.
- CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.
- THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.
- KEEP SMALL PART OUT OF REACH OF CHILDREN.
- MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.
- DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.
- DO NOT TIGHTENED SCREWS UNTIL FULLY ASSEMBLED.
- DO NOT OVER TIGHTENED SCREWS OR BOLTS.
- DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGE OR WORN.
- DO NOT SIT AND STAND ON THE PRODUCT.
- TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.
- NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.

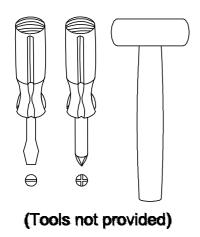

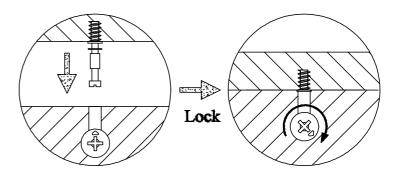

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


This is how a cam nut works......

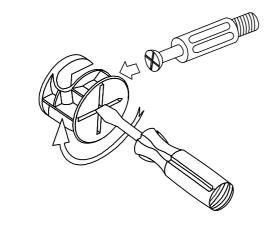

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

TWO PERSONS REQUIRED TO ASSEMBLE THIS PRODUCT

- 1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.
- 2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
- 3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

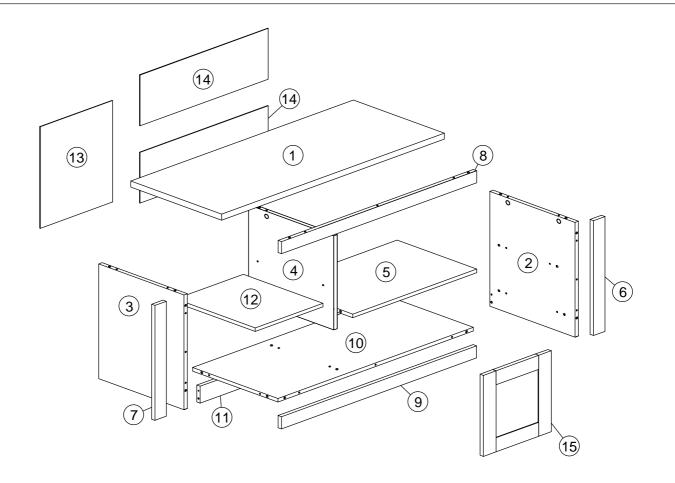


PARTS LIST

NO.	PARTS			QTY		
1	980	Х	400	Х	25	1 PC
2	475	х	375	х	15	1 PC
3	475	Х	375	Х	15	1 PC
4	389	Х	375	Х	15	1 PC
5	545	Х	350	Х	15	1 PC
6	475	Х	50	Х	15	1 PC
7	475	х	50	Х	15	1 PC
8	858	х	50	Х	15	1 PC
9	858	Х	50	Х	15	1 PC
10	860	х	375	Х	15	1 PC
11	860	Х	70	Х	15	1 PC
12	298	Х	350	Х	15	1 PC
13	420	х	318	х	2.5	1 PC
14	564	Х	210	Х	2.5	2 PC
15	331	х	300	х	15	1 PC

HARDWARE LIST


NO.		DESCRIPTION	QTY
Α		WOOD DOWEL M8 x 25MM	26
В		CAM NUT	28
С		CAM BOLT	28
D	(0)	CAM CAP	28
E	<i>≥mm</i> (CB SCREW M3.5 x 16MM	8
F	<=====================================	CSK CAP WOOD M6 x 50MM	2
G		HINGES 7/8	2
Н	<i></i>	ALLEY KEY M4	1
ı	Q	HANDLE ZH-1609.NH 30MM	1
J	•	HANDLE SCREW M4X22MM	1
K	0	PVC NAIL WITH PIN 5/8	4
L	Ø	METAL SHELF SUPPORT	4
М	₩	NAIL 5/8	18



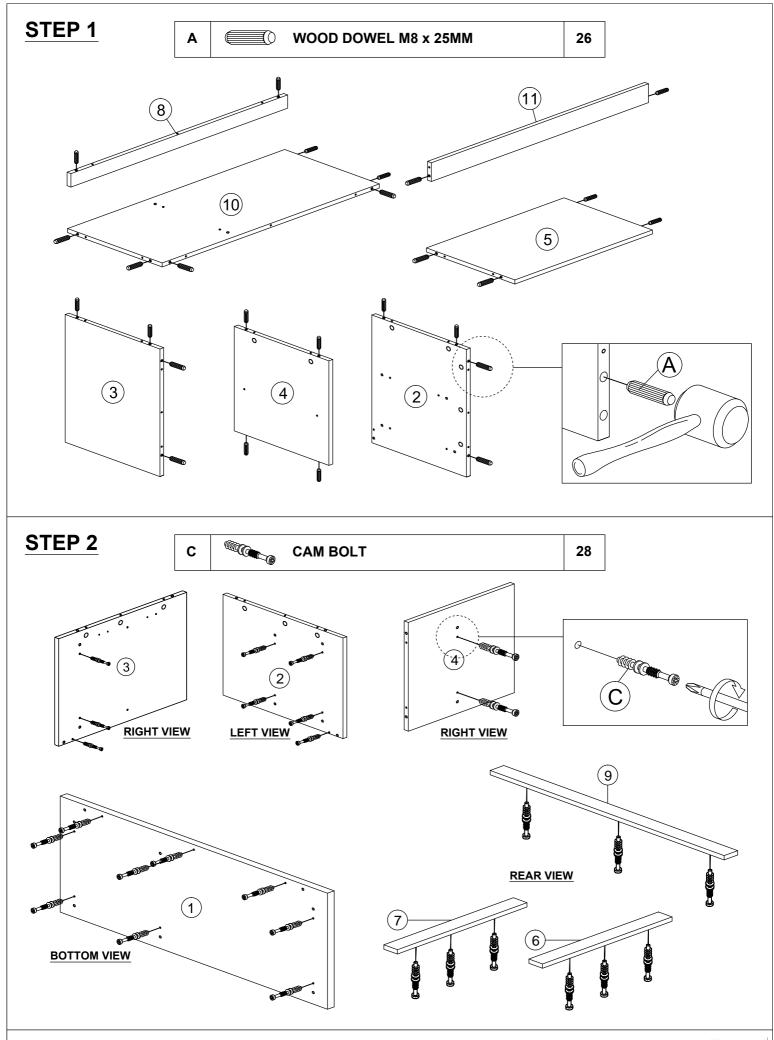




E	<i>⊲шш</i> (}	CB SCREW M3.5 x 16MM	4
G		HINGES 7/8	2
ı	<i>O</i>	HANDLE ZH-1609.NH 30MM	1
J	(†	HANDLE SCREW M4X22MM	1

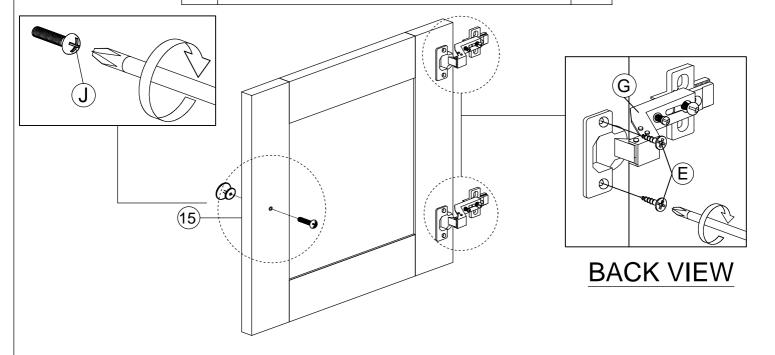


STEP 4

В		CAM NUT	6
D	(0)	CAM CAP	6
Н		ALLEN KEY M4	1

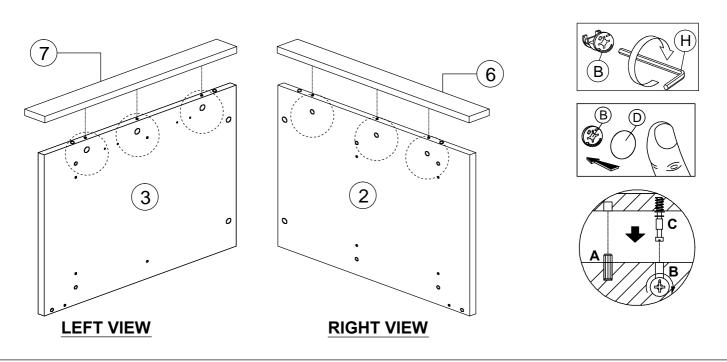




В		CAM NUT	2
D	(G)	CAM CAP	2
F	< mmmmmx (9)	CSK CAP WOOD M6 x 50MM	2
н		ALLEN KEY M4	1

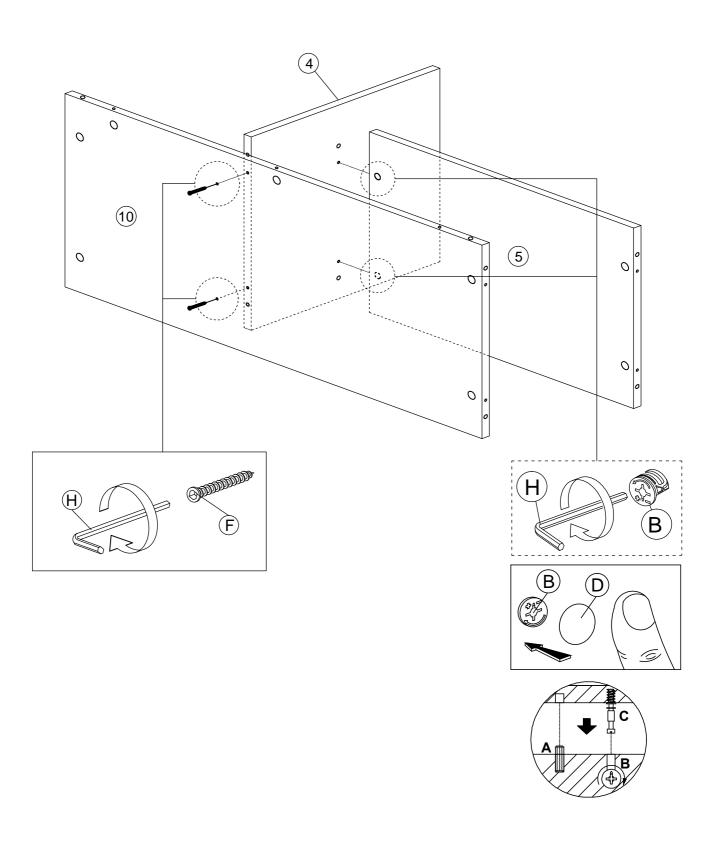





STEP 6 B CAM NUT B CAM CAP B ALLEN KEY M4 1

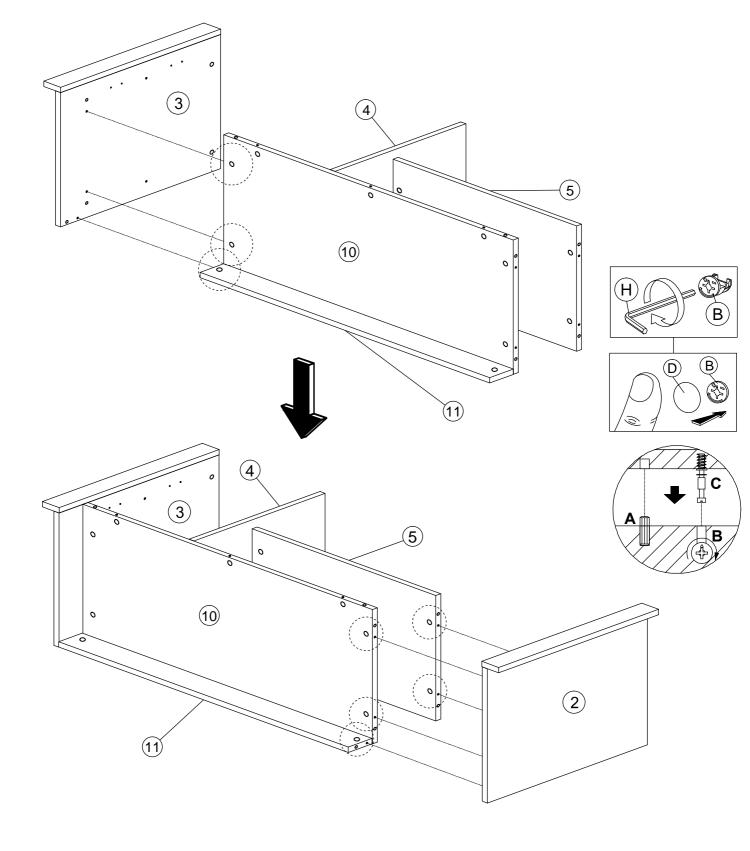




В		CAM NUT	3
D	(a)	CAM CAP	3
Н		ALLEN KEY M4	1

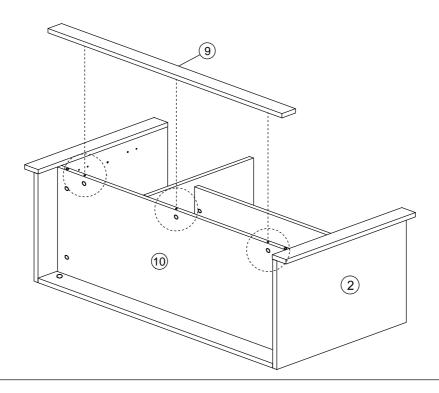


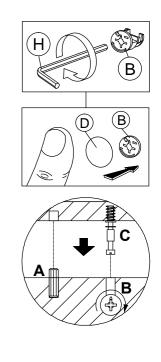

STEP 8


В		CAM NUT	3
D	(a)	CAM CAP	3
Н		ALLEN KEY M4	1

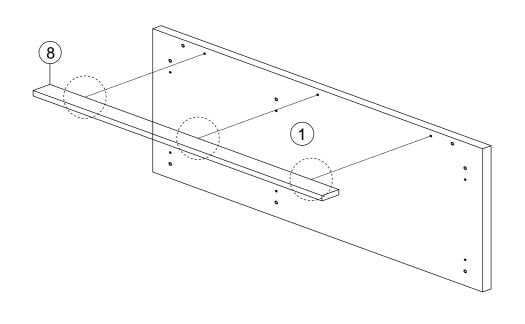


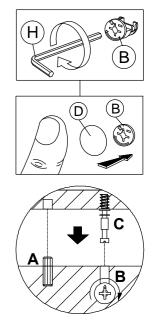






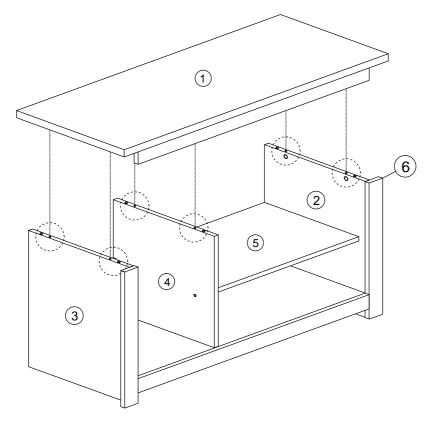

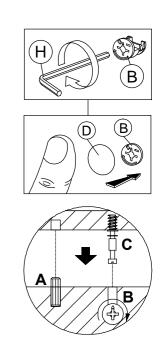





M NAIL 5/8

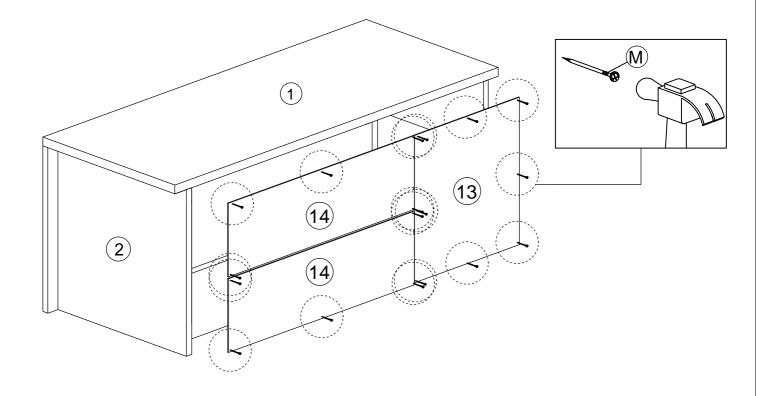



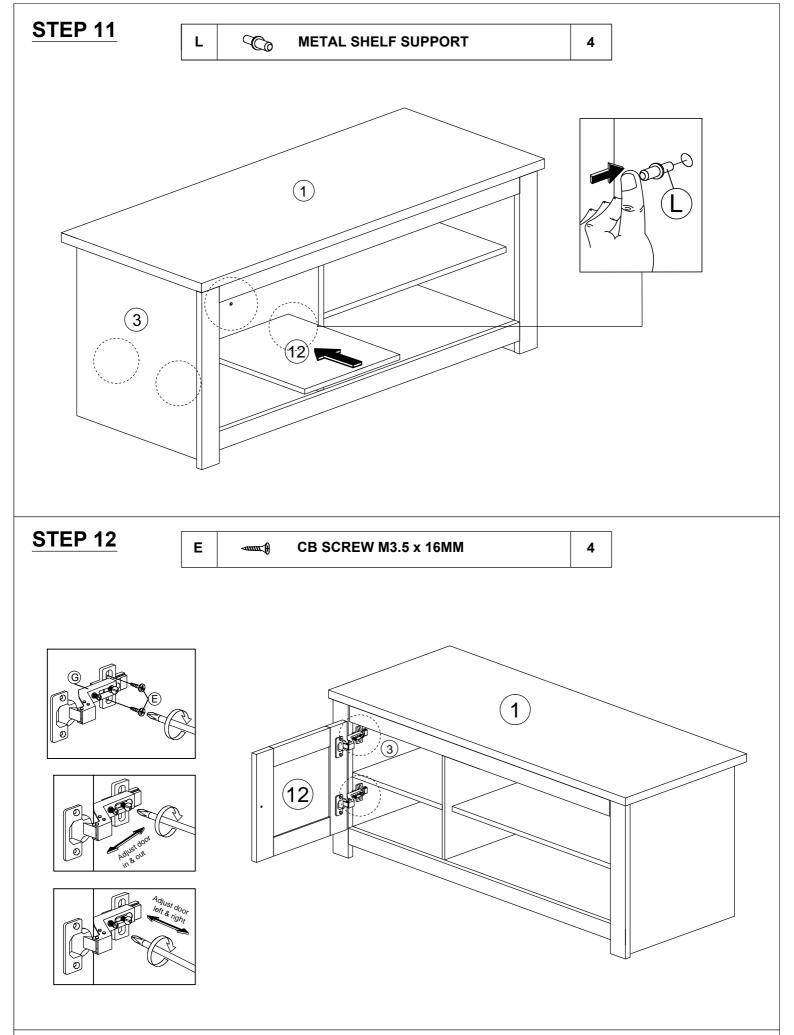



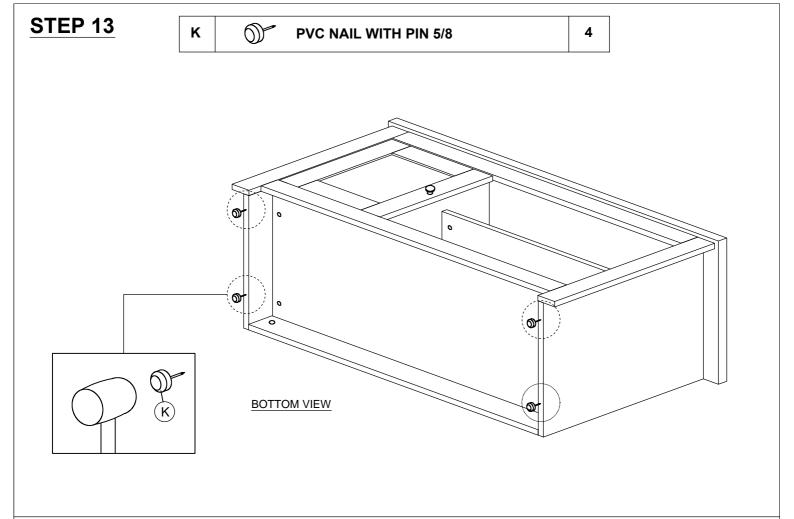

COMPLETED

